

## Pin Table

For help on placing pins not listed, call: Shane Freeze 336-859-2002

Takeuchi 14 Pin **Kubota 14 Pin** B=Black = Ground B=Ground E=Yellow C=Hot D=Hot F=Orange

C=Red Only have two functioning unless you D=Blue have added more from Kubota

Case 14 Pin

Gehl 14 Pin

## **Bobcat S Models 14 Pin Only**

B=Black = Ground B=Black = Ground

E=Orange C=Orange F=Yellow D=Yellow G=Blue E=Blue H=Red F=Red

## Cat D Models 14 Pin

John Deere G or D Models 14 Pin B=Black = Ground A=Black= Ground

C=Red F=Blue E=Red D=Blue E=Yellow C=Yellow D=Orange G=Orange

## **Terex PT Models**

A=Black = Ground B=Black = Ground

E=Orange C=Orange F=Yellow D=Yellow C=Blue E=Red D=Red F=Blue

The pin table covers the 5 wire articulating brush cutter assembly if you purchased the following: Hyd. Angle Broom/6-way Dozer Blade/ Hyd Rotating Tree Shear or any other 2 function attachments you may have. You will need to place pinned wires in the correct letter that corresponds with your model which is listed above. The Black wire on the connector assembly is your ground, the Red wire on your connector assembly is any other pin listed above. Never pin K which is constant hot.